


INSTALLATION INSTRUCTIONS ADP BOUNDARY POST

DOC REF: 327 ISSUE 01

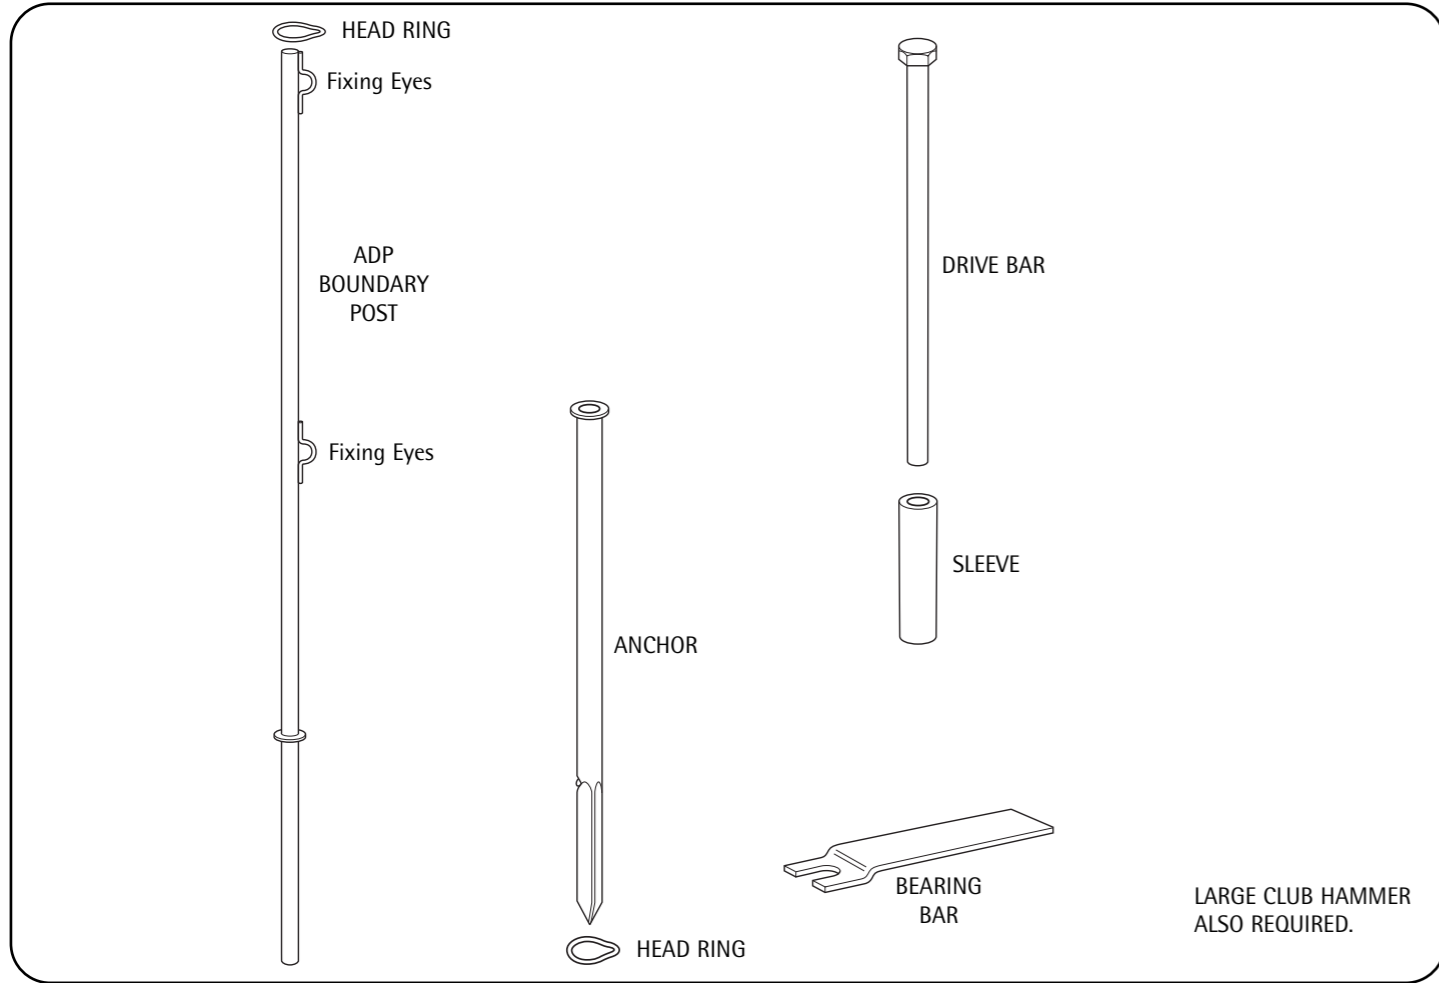

1

Always check for buried services

2

ANCHORING
Place a head ring on the ground and using the sleeve and drive bar, drive the anchor until the head is just below ground level, remove the drive bar and sleeve.

IF YOU DO NOT INTEND TO LOCK THE ANCHOR TO THE POST DO NOT USE THE HEAD RINGS

3

DRIVING OUT THE FLUKE
Remove sleeve.
Slide the bearing bar under the anchor head and using the drive bar only hammer down to drive out the fluke.
Remove the drive bar.

4

Put the post into the anchor and put on a head ring if the post is to be locked to the anchor.