
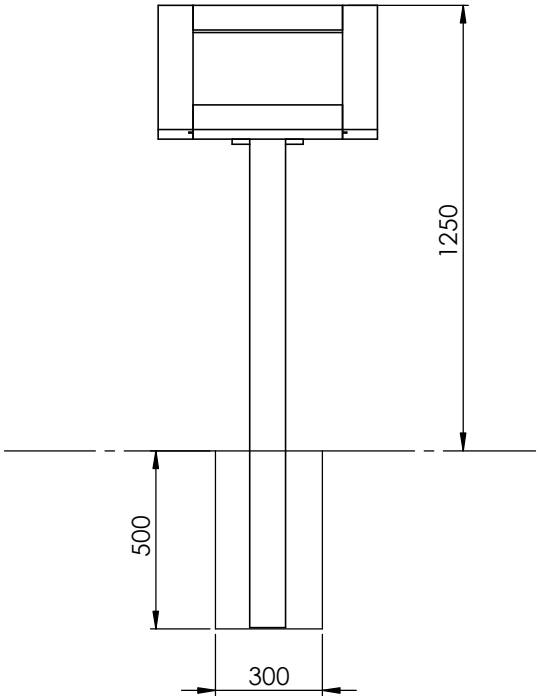
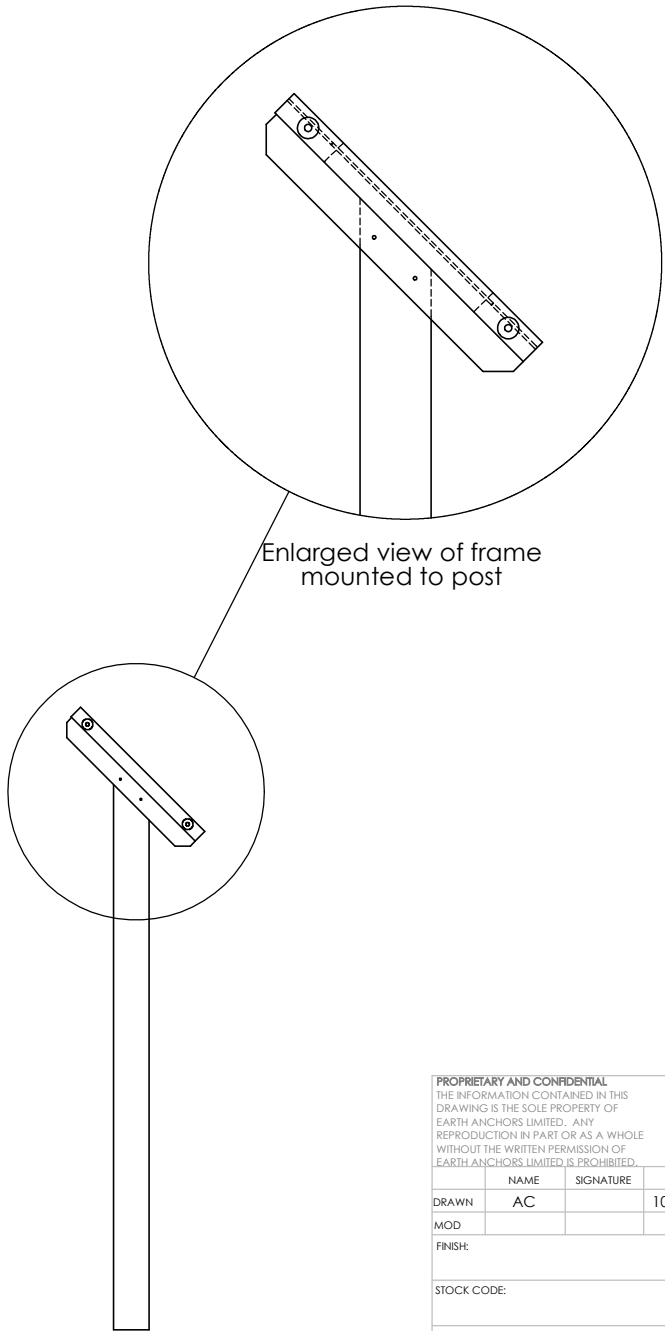


Assembly instructions

1. Assembly the artwork frame to the post using the screws provided.
2. Dig a hole 300mm wide and 500mm deep.
3. Place the lectern in the hole. Use supports and bracing to keep it plumb/level.
4. Set in place with concrete or postcrete.
5. The final height can be between 1m and 1.25m above ground level.

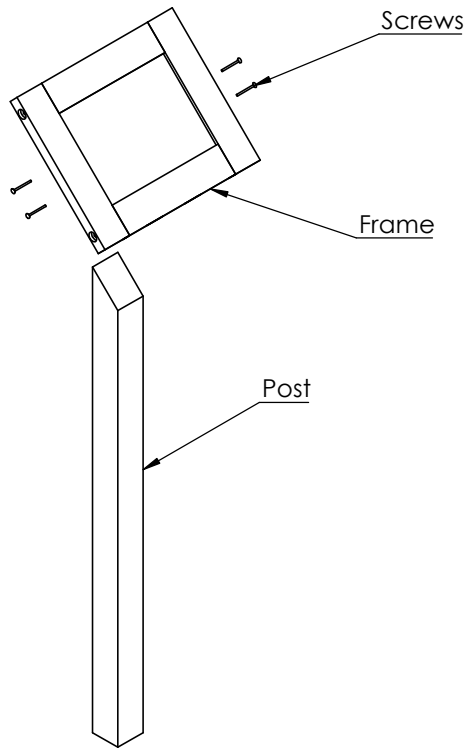

PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF EARTH ANCHORS LIMITED. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF EARTH ANCHORS LIMITED IS PROHIBITED.				UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS SURFACE FINISH: RAW TOLERANCES: LINEAR: ANGULAR:				DEBUR AND BREAK SHARP EDGES		DO NOT SCALE DRAWING		A3			
										Earth Anchors Ltd					
DRAWN				NAME AC		SIGNATURE		DATE 10/01/24						TITLE: A3 Lectern	
MOD														Assembly and installation instruction	
FINISH:						SW-DWG NAME: FSL_200A									
STOCK CODE:						SW-PART NAME:						DWG NO. EA2400684		REVISION 1	
WEIGHT:						MATERIAL:									
												SCALE:		SHEET 1 OF 1	