
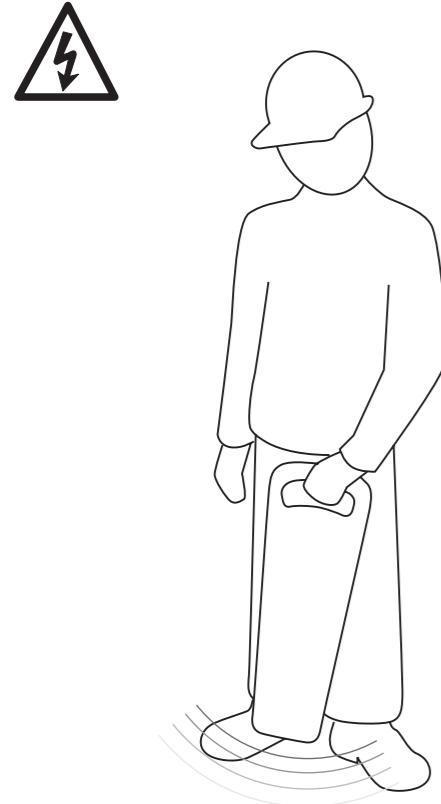


INSTALLATION INSTRUCTIONS CENTENARY AND EVERGREEN BENCH


DOC REF: 426 ISSUE 01

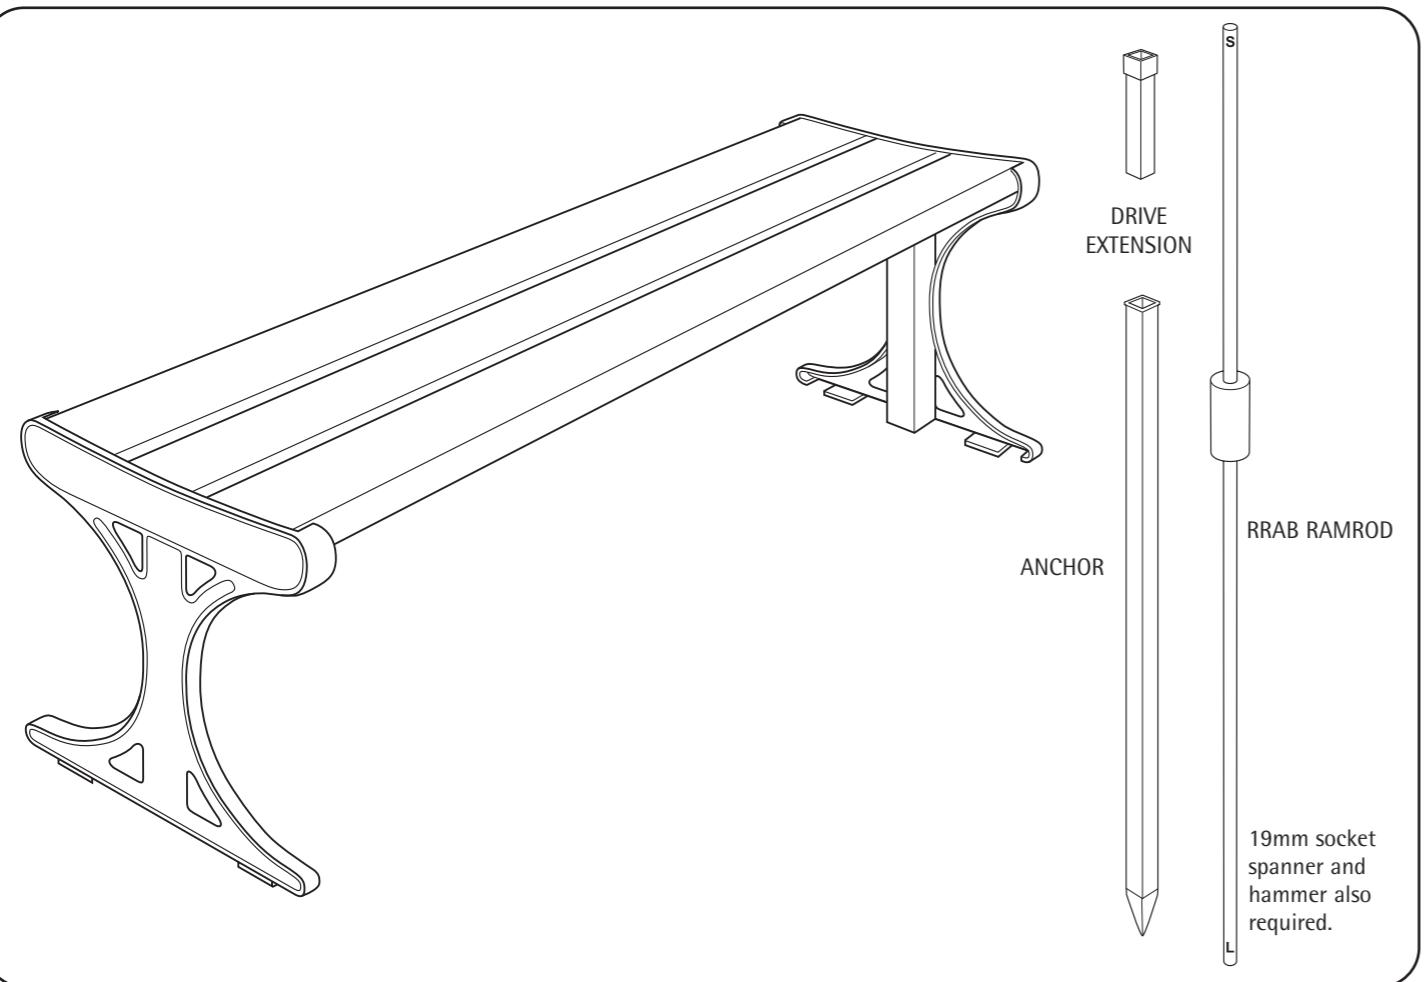

1


ASSEMBLING THE BENCH

Attach the bench support to the end frames using M12 x 40 bolts, washers, half nuts and shear nuts. Check the boards fit the assembly. Position the bench, levelling the ground as necessary. Tighten and shear off shear nuts. IF THE SEATS ARE NOT TO BE ANCHORED GO TO STEP 6. Fit the outer boards with the thinner edges in the centre, using M12 x 70 coachbolts, washer and shear nuts.

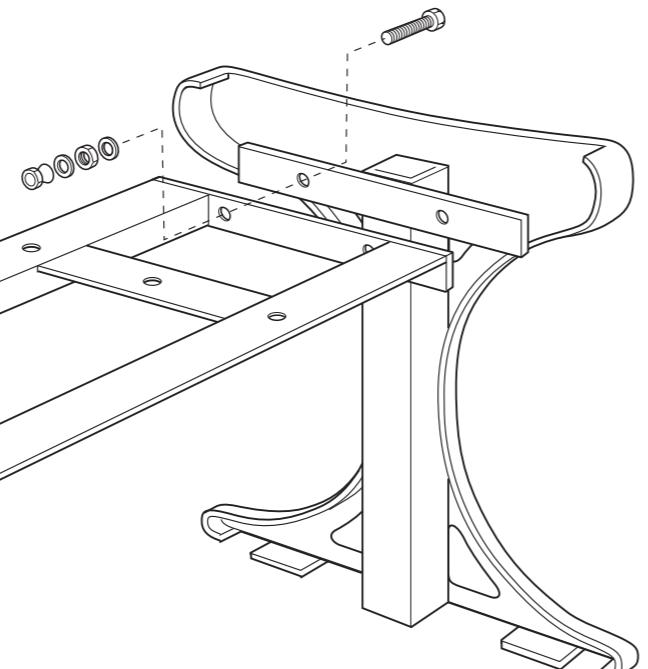




2

ANCHORING
Ensuring the bench is level. Insert the anchor into an end frame. Put the drive extension into the anchor. Insert the **short end** of the ramrod into the drive extension, anchor and end frame.

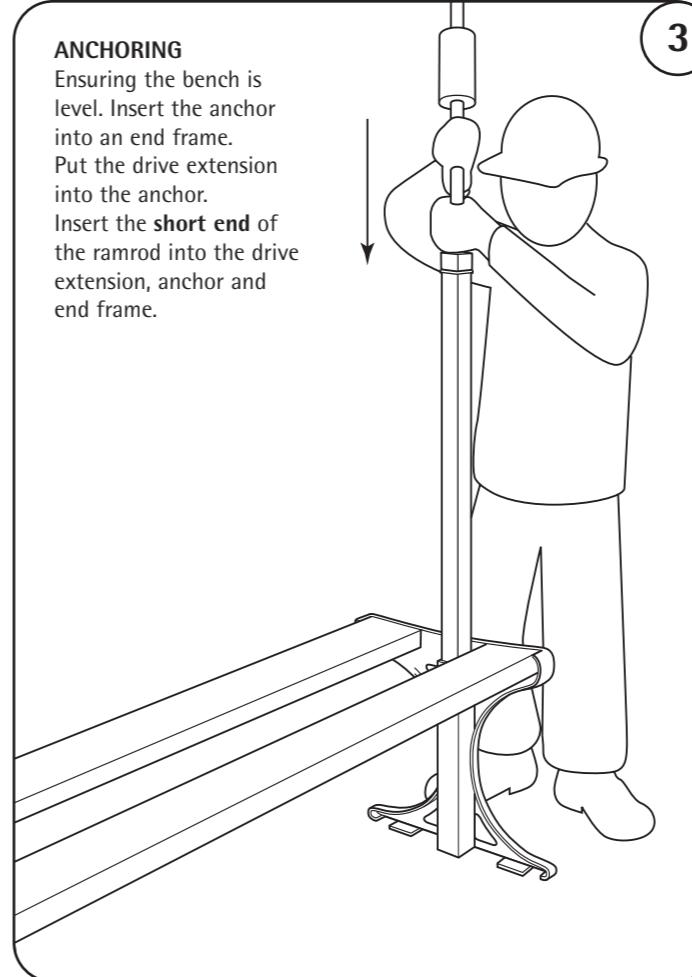

Lift and ram down the ramrod until the anchor collar meets the end frame.

Repeat the operation for the other anchor. Check that the bench is level.

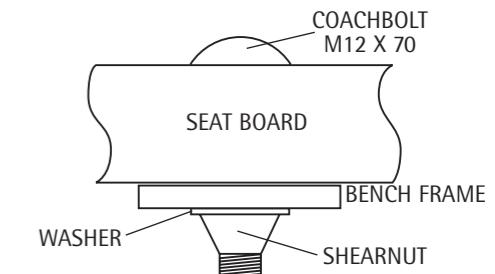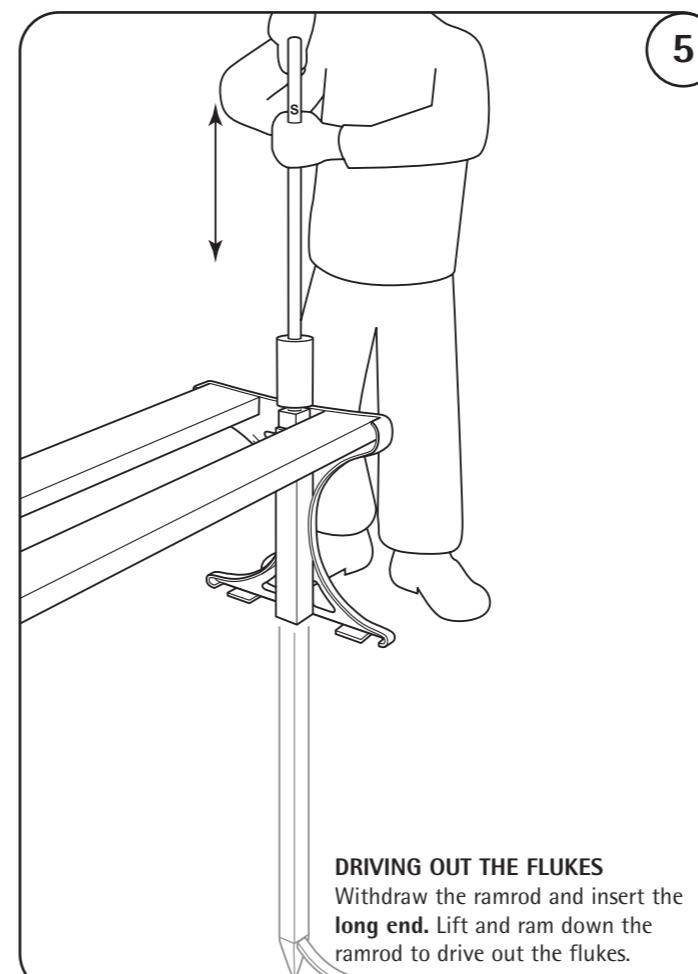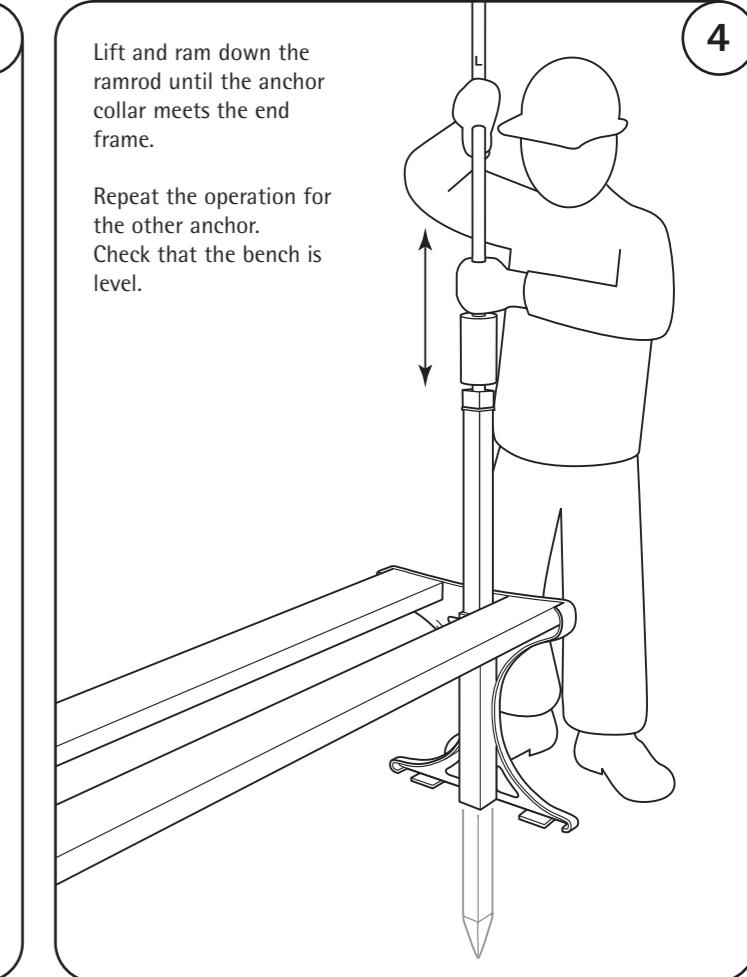

FINAL ASSEMBLY OF THE BENCH
Fit the boards with the thinner edges in the centre, using M12 x 70 coachbolts, washer and shear nuts. Carefully tighten the shear nuts remembering that the plastic may compress. If so do not tighten anymore, but tap the hexagon until it fractures.

Caution: Shearing of the nuts can usually be sensed but we advise the wearing of gloves during tightening of nuts to prevent possible skinning of knuckles.



Earth Anchors Ltd
15 Campbell Road, Croydon, Surrey CR0 2SQ, United Kingdom.
Tel: 020 8684 9601 Fax: 020 8684 2230
www.earth-anchors.com

6

DOC REF: 426 ISSUE 01