


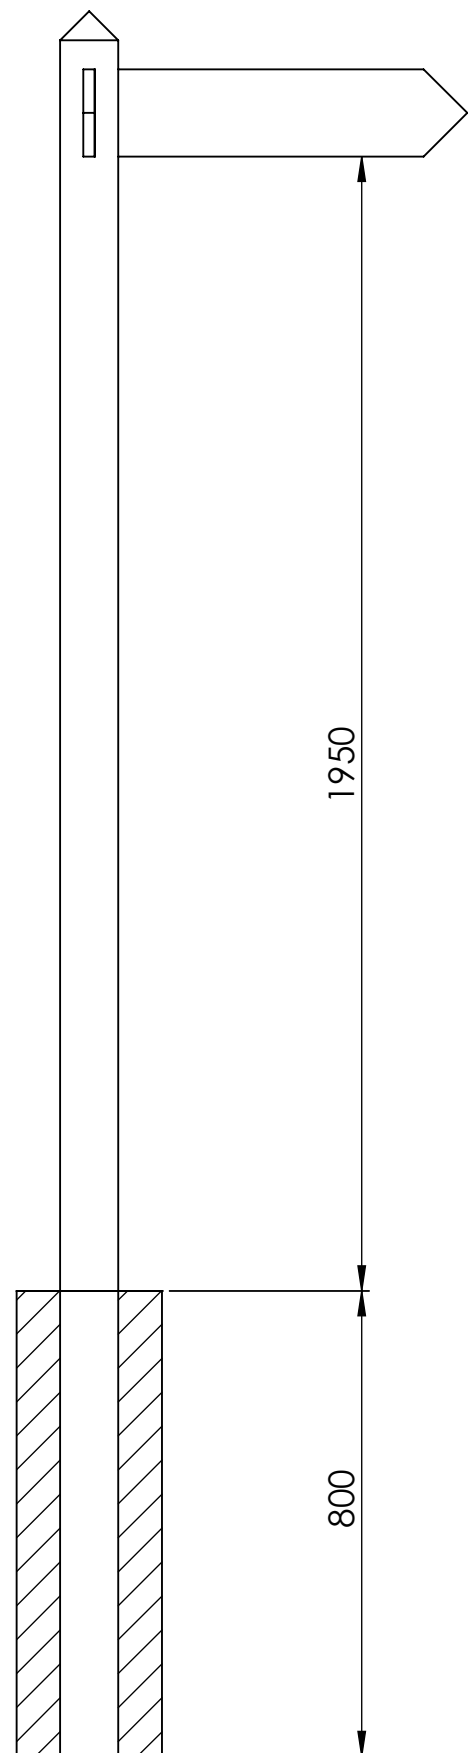

Installation method.

Check all items before assembly.

With the finger post lying down on the ground. Insert the supplied engraved fingers into the corresponding slots, checking for squareness and orientation with local landmarks.


Screw fingers into place using the supplied stainless steel screws.

Careful, do not overtighten the screws.

Dig a hole in the desired location to a depth of approx. 80cm. Place the post in the hole, check for plumb and fix using postcrete to secure into place.

The post may require additional support while the postcrete sets.

If necessary, the post can be cut down using a normal wood saw.

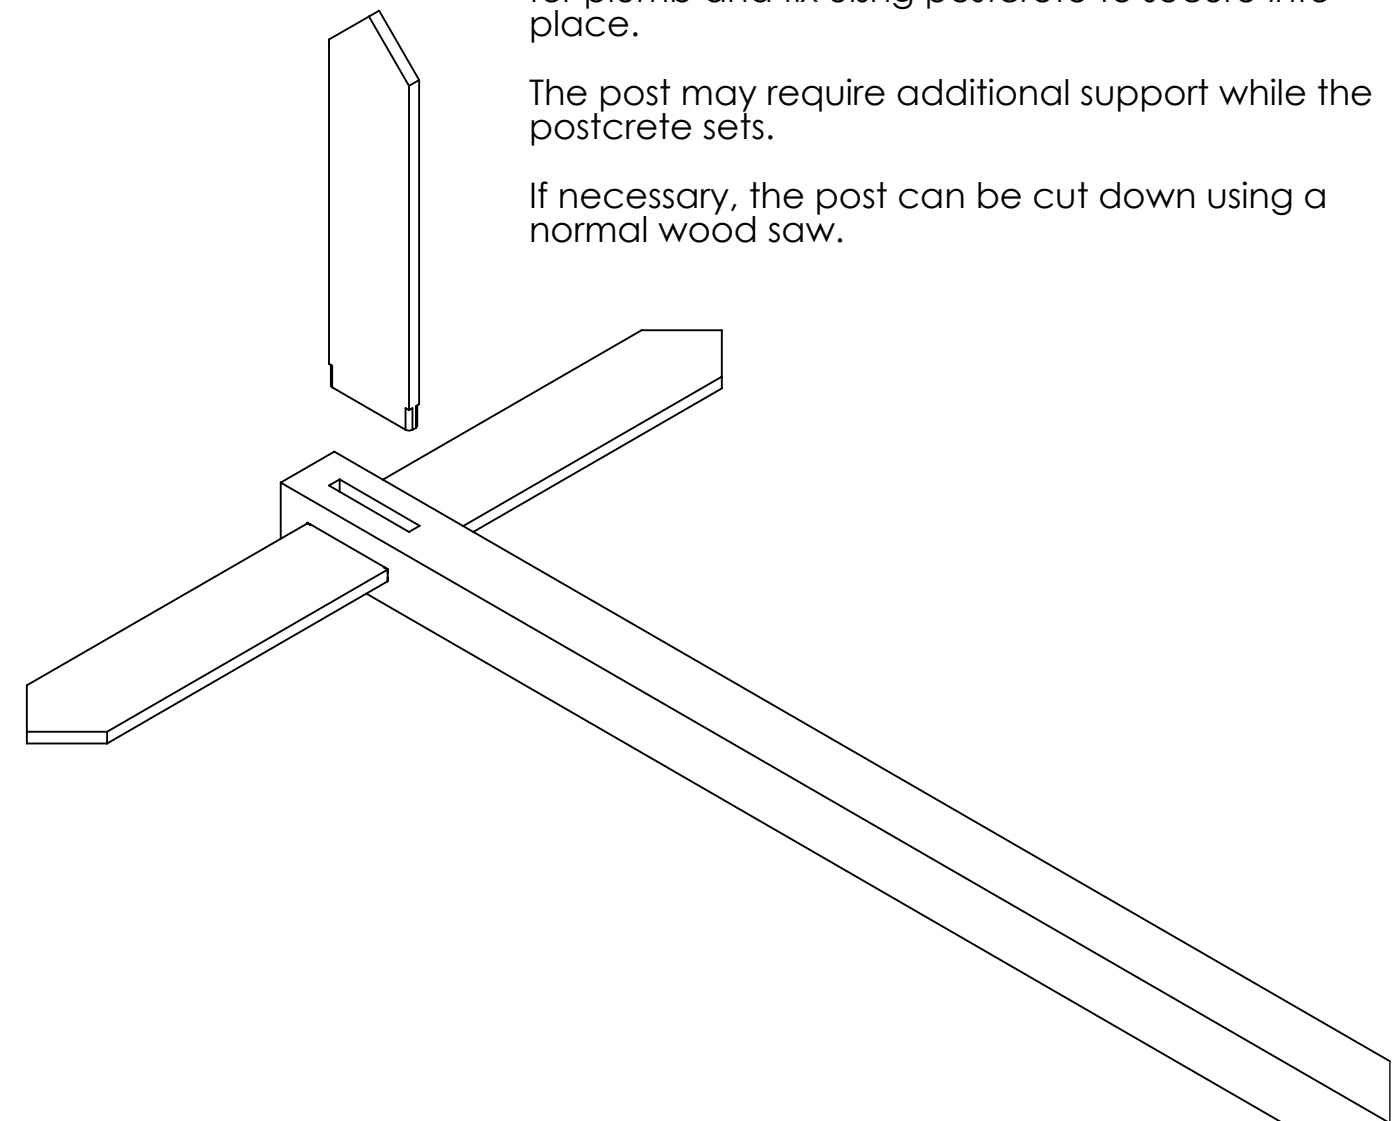

PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF EARTH ANCHORS LIMITED. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF EARTH ANCHORS LIMITED IS PROHIBITED.				UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS SURFACE FINISH: RAW TOLERANCES: LINEAR: ANGULAR:		DEBUR AND BREAK SHARP EDGES		DO NOT SCALE DRAWING		A3		
								Earth Anchors Ltd				
DRAWN		NAME AC	SIGNATURE	DATE 06/11/24					TITLE: Finger Post Installation Instructions 3 Direction - Single Level			
MOD												
FINISH:				SW-DWG NAME: FPD_300A					DWG NO.			REVISION
STOCK CODE:				SW-PART NAME:								
WEIGHT:				MATERIAL:					SCALE:			SHEET 1 OF 1