

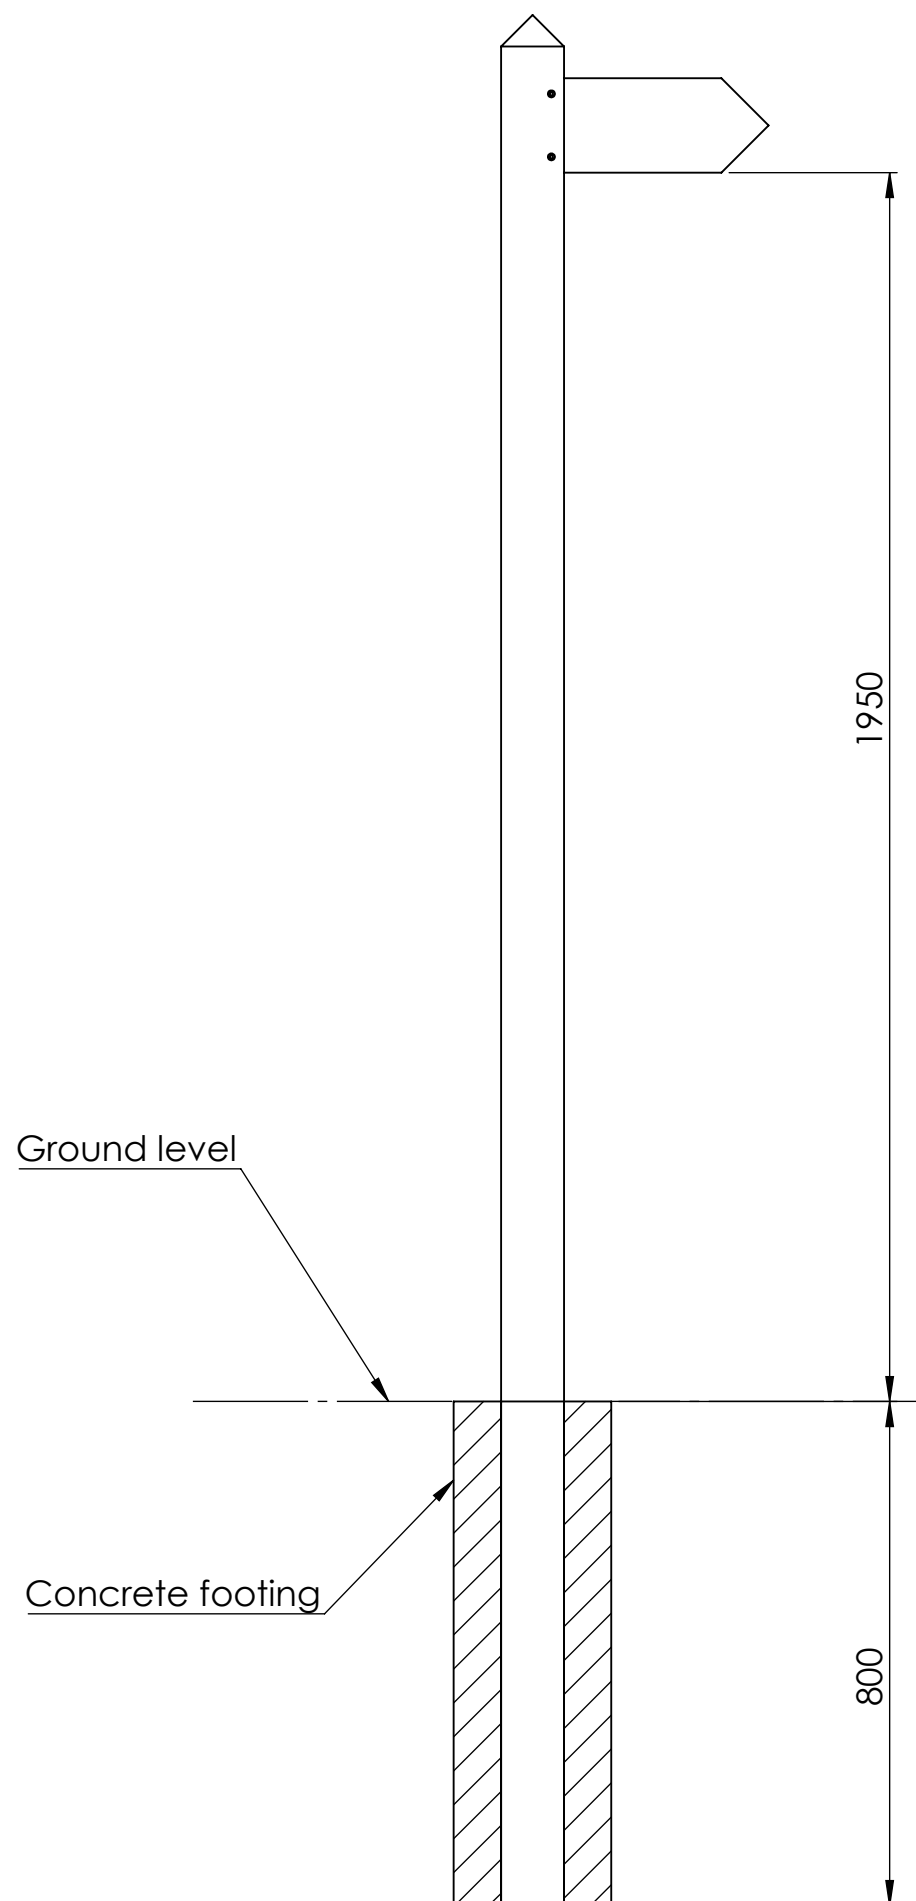


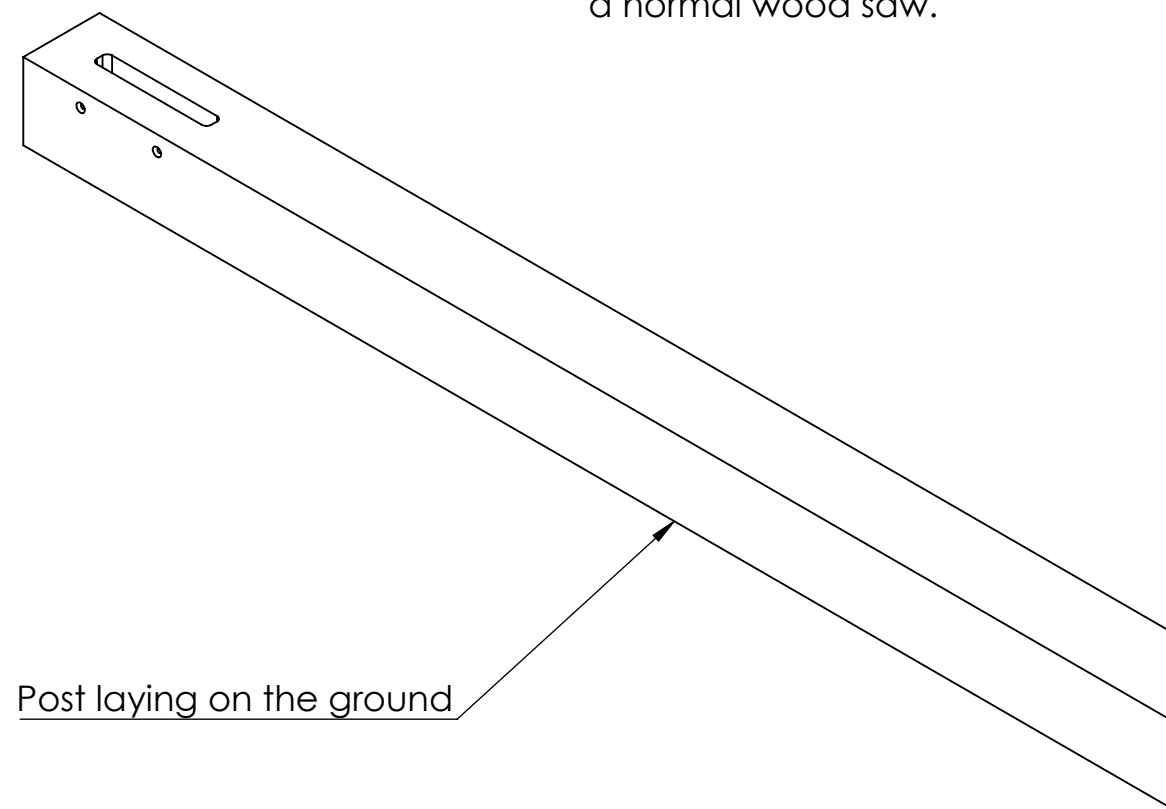

Engraved finger.

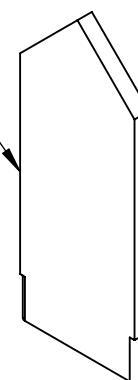

Post laying on the ground

Installation method

Check all items before assembly.

With the finger post lying down on the ground. Insert the supplied engraved fingers. (Don't fit the screws yet)

Dig a hole in the desired location to a depth of approx 80cm. Insert post so that the underside of the engraved finger is approx 180 - 195cm from the ground.

Ensure the post is plumb. Use postcrete as per packet instructions to secure it in place.

Finish the installation by fixing the finger in place with the supplied screws.

Do Not Overtighten the screws.

If necessary, the post can be cut down using a normal wood saw.

PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF EARTH ANCHORS LIMITED. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF EARTH ANCHORS LIMITED IS PROHIBITED.				UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS SURFACE FINISH: RAW TOLERANCES: LINEAR: ANGULAR:		DEBUR AND BREAK SHARP EDGES	DO NOT SCALE DRAWING		A3
							Earth Anchors Ltd		
DRAWN	NAME AC	SIGNATURE	DATE 10/04/23				TITLE: Finger Post - Assembly and Installation Instructions		
MOD									
FINISH:				SW-DWG NAME: FPD_100A					
STOCK CODE:				SW-PART NAME:			DWG NO. EA2400710		REVISION 1
WEIGHT:				MATERIAL:			SCALE:		SHEET 2 OF 2