
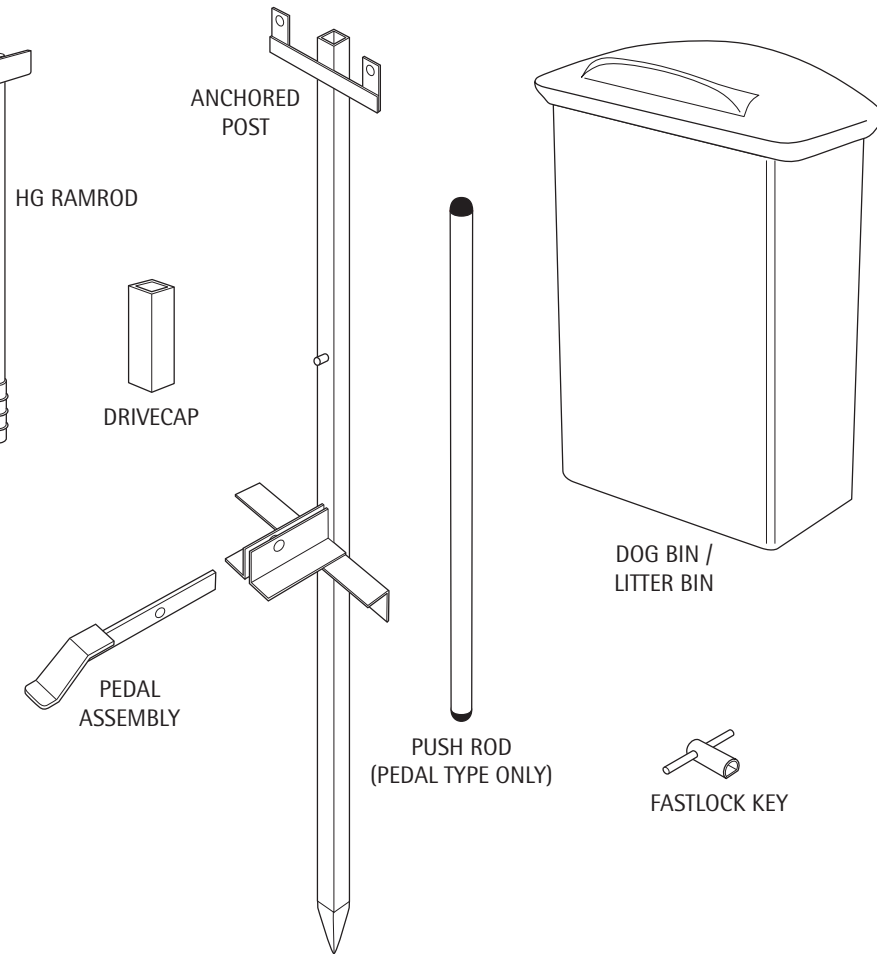


INSTALLATION INSTRUCTIONS HEALTHGUARD® HGN45A & HGN66A DOG WASTE / LITTER BINS


DOC REF: 407 ISSUE 03

IMPORTANT:
ENSURE THAT THE NUTS
ON THE CENTRAL BAR
AND HANDLES ARE TIGHT
BEFORE AND DURING US

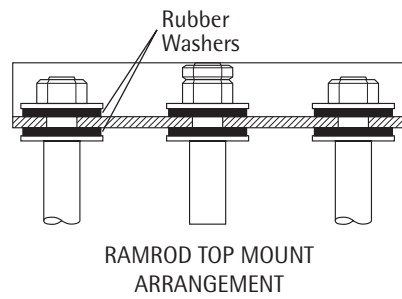


Always check for buried services

1

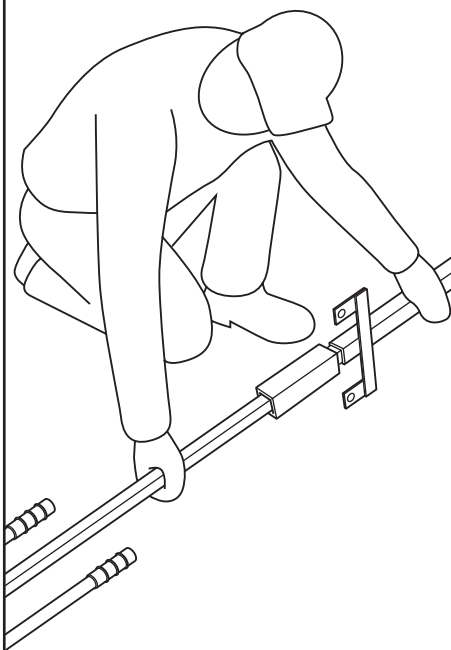


Fit drive cap to post and
insert ramrod

2

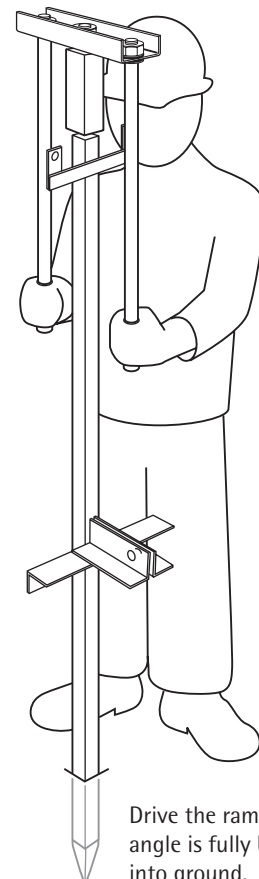

Drive the ramrod until
angle is fully bedded
into ground.
Make sure it is vertical.


3

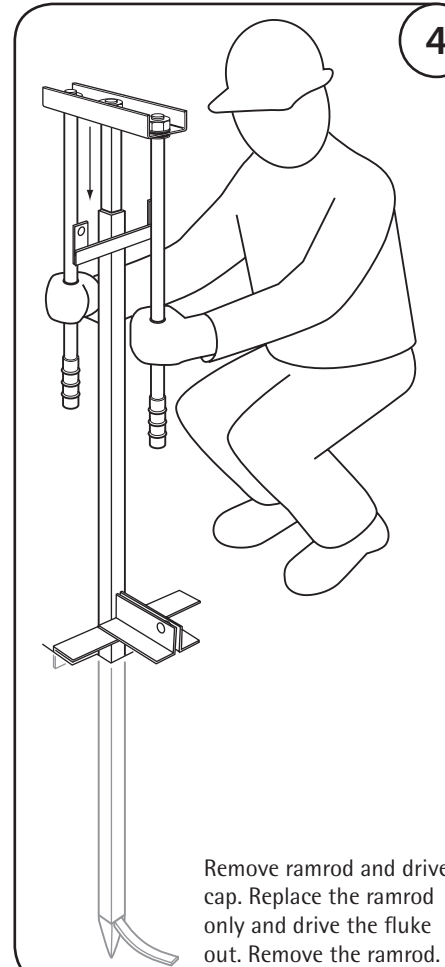

Remove ramrod and drive
cap. Replace the ramrod
only and drive the fluke
out. Remove the ramrod.


4

IF NON-PEDAL GO TO STEP 7

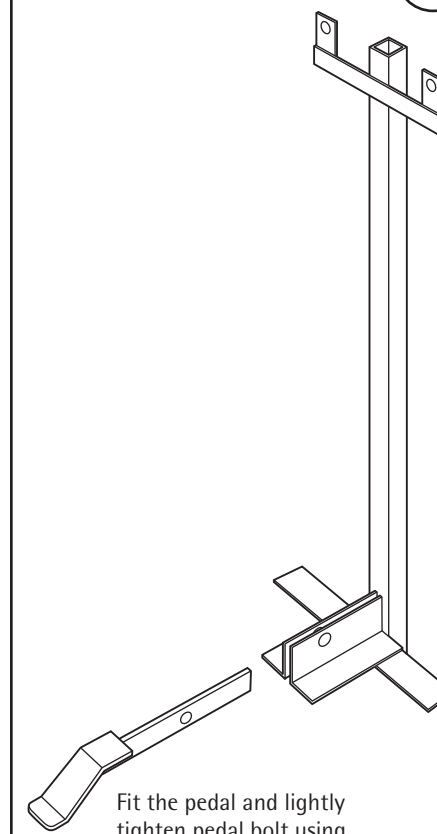


Fit the pedal and lightly
tighten pedal bolt using
19mm spanner (pedal
post only).

5

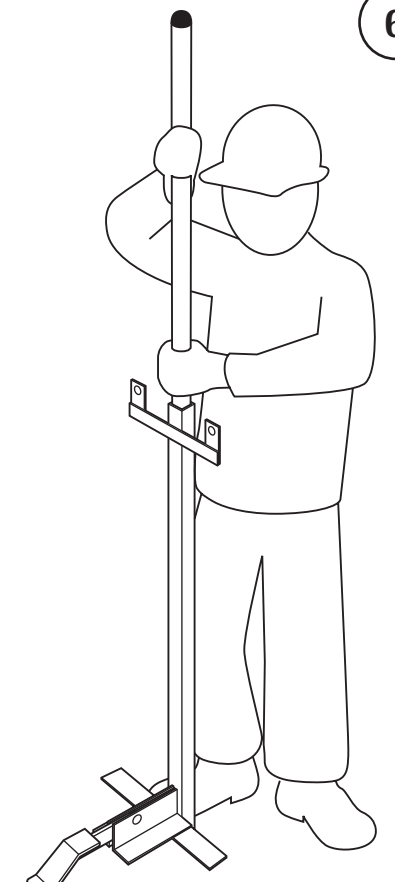


Drop the pushrod into the post

6

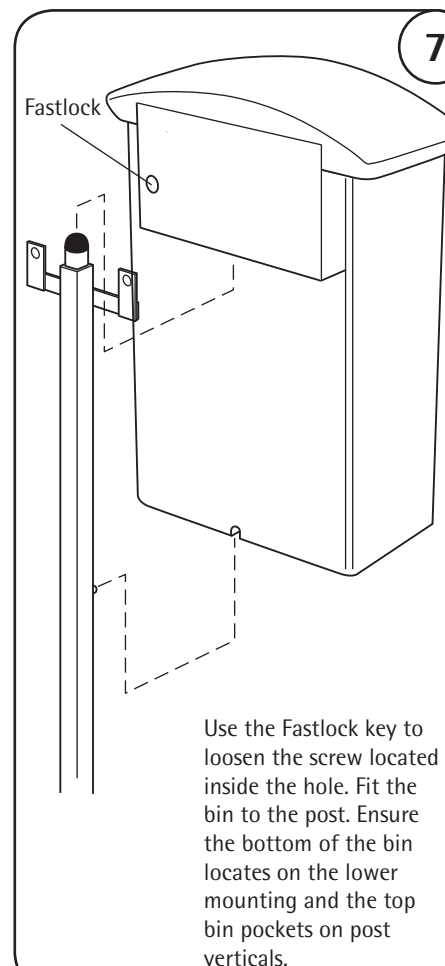


Use the Fastlock key to
loosen the screw located
inside the hole. Fit the
bin to the post. Ensure
the bottom of the bin
locates on the lower
mounting and the top
bin pockets on post
verticals.

7

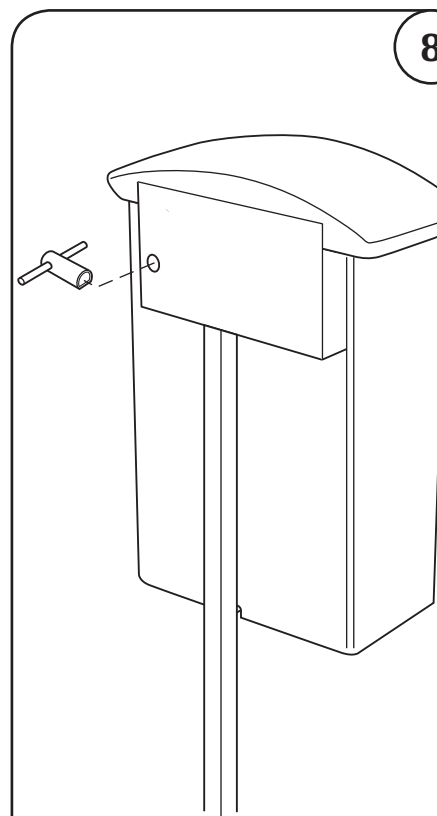

Using the Fastlock key
tighten the screw located
inside the hole.

8

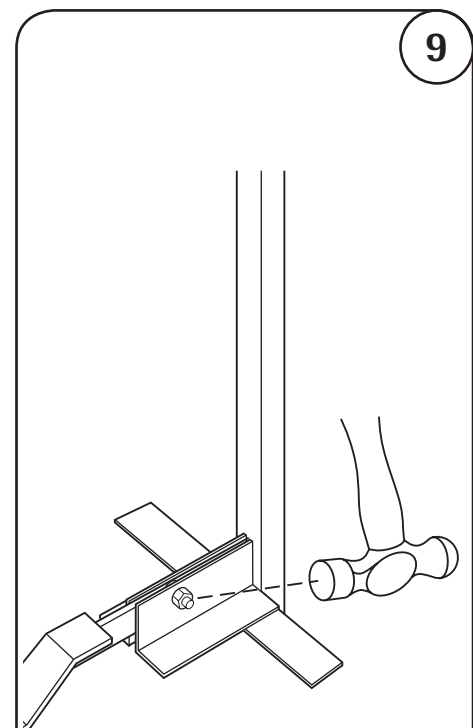

Deform the end of the
thread to improve security.
(pedal type only).

9



Earth Anchors Ltd
15 Campbell Road, Croydon, Surrey CR0 2SQ, United Kingdom.
Tel: 020 8684 9601 Fax: 020 8684 2230
www.earth-anchors.com

DOC REF: 407 ISSUE 03