




- Tools Required
- Drill driver & PZ2 Driver bit
 - Spirit Level
 - Mallet
 - Spade

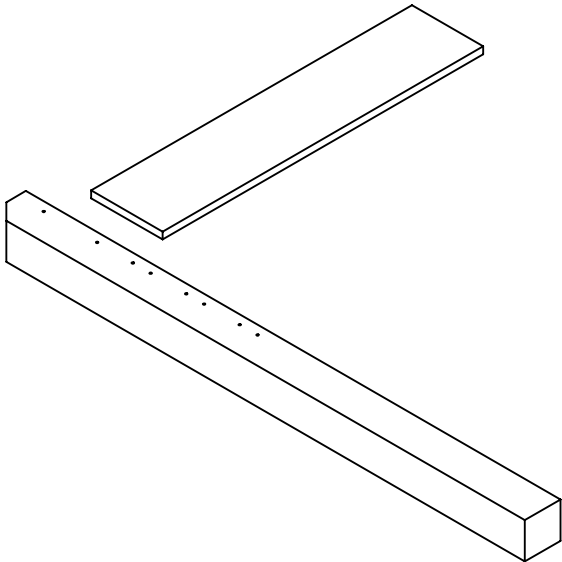

1. Lay a post on the ground with the screw holes facing upwards. (This is the back of the sign)


Insert all the horizontal rungs into the pockets. Matching the order of the rungs to the layout shown on the proofing sheet.

2. Fit the second post onto the rungs, ensuring that all the rungs are seated fully into the pockets.

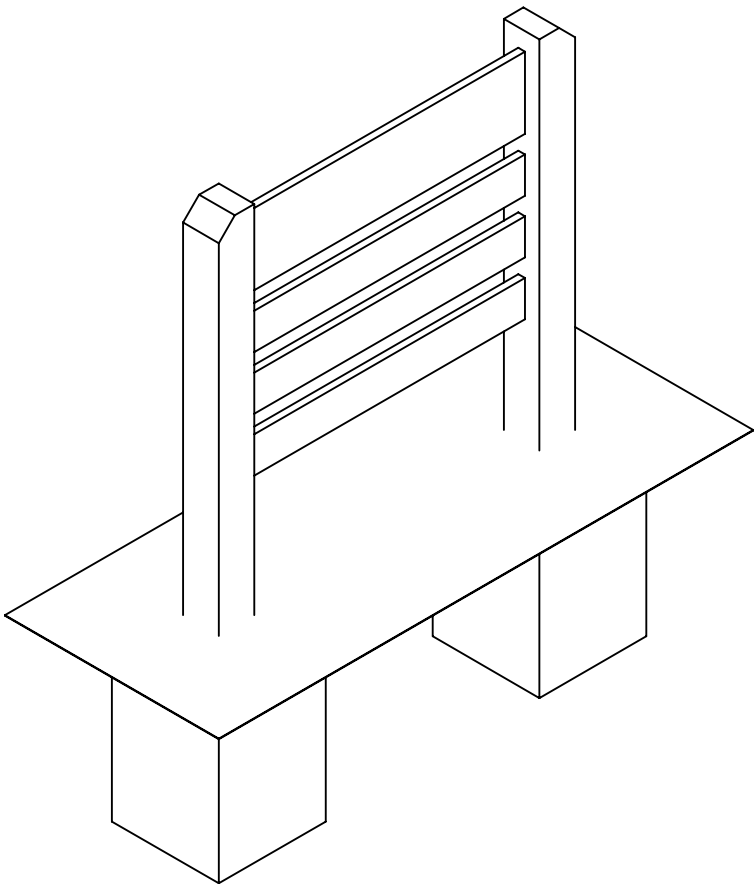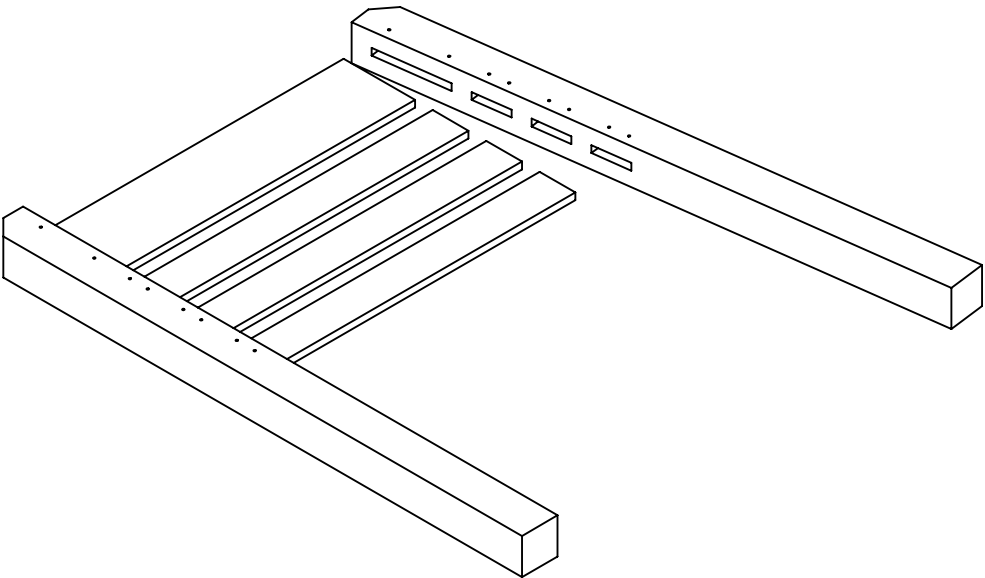

3. Check for square before fixing using the stainless steel screws provided.

Do not over tighten the screws

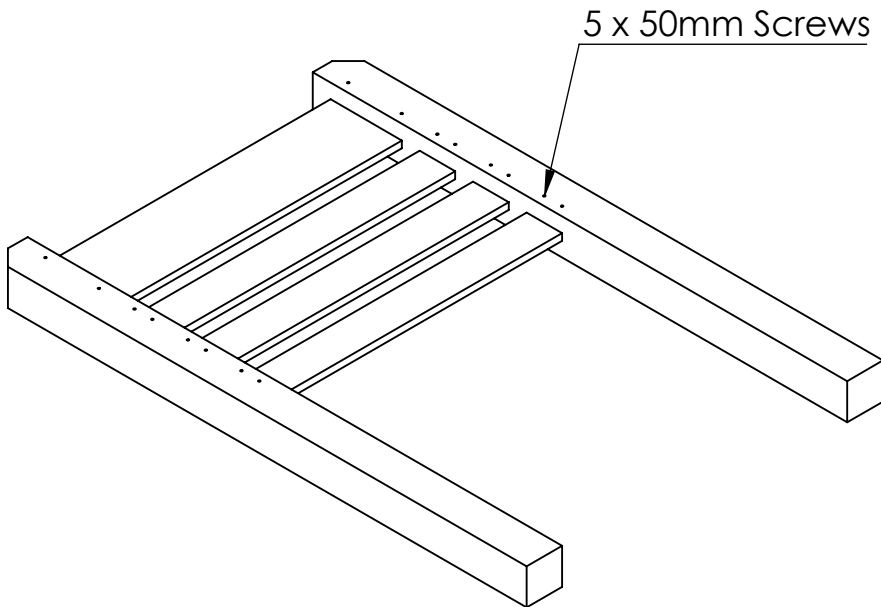

4. Dig two holes at the base of the sign approx 40 x 40cm and 50cm deep.

(Suitable for a ladder sign of 100cm Tall)

Lift the assembly into the holes and fix in place using quick setting concrete.

DO NOT SCALE DRAWING		A3
Earth Anchors Ltd		
TITLE: Ladder Sign - Low Height Assembly Instructions		
DWG NO. EA2500839		REVISION 1
SCALE:	SHEET 1 OF 1	