


1


Important

If the table is to be bolted or anchored in place, do so before fitting the benches. Only fit brackets to the wider side of the legs.

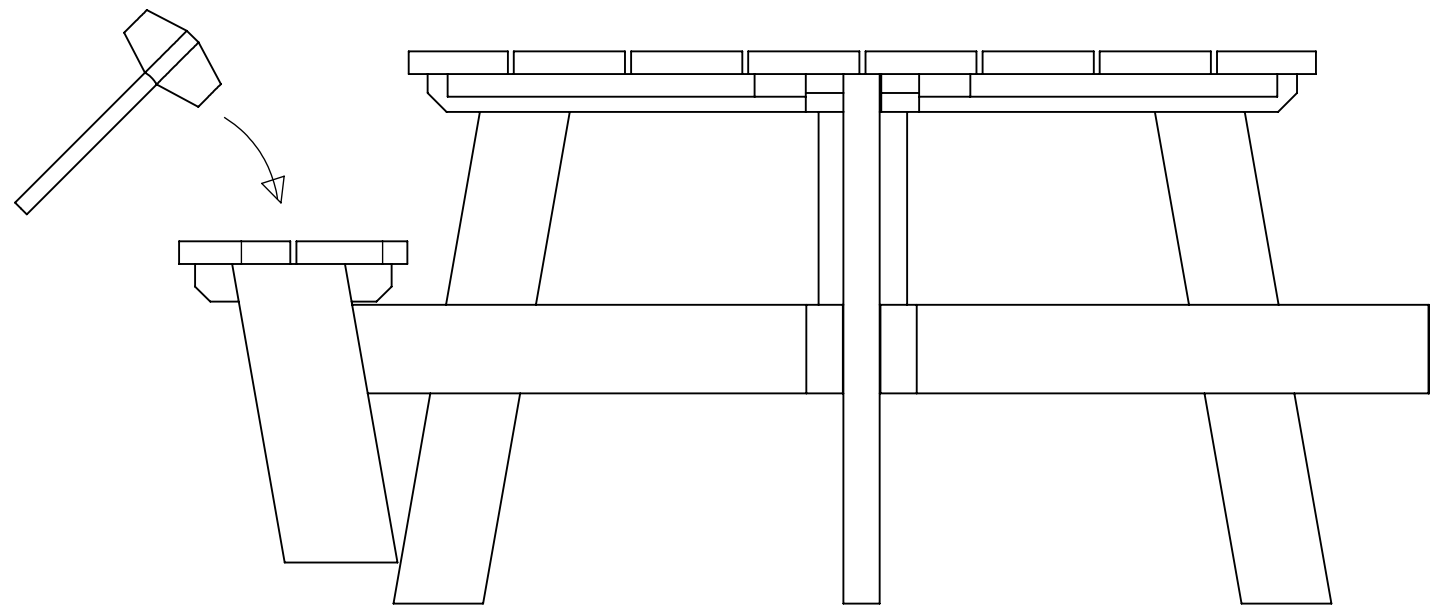

2

Place a bench so that the centre piece of 50 x 50 plastic is in line with the table leg. Use a mallet to knock the bench down.

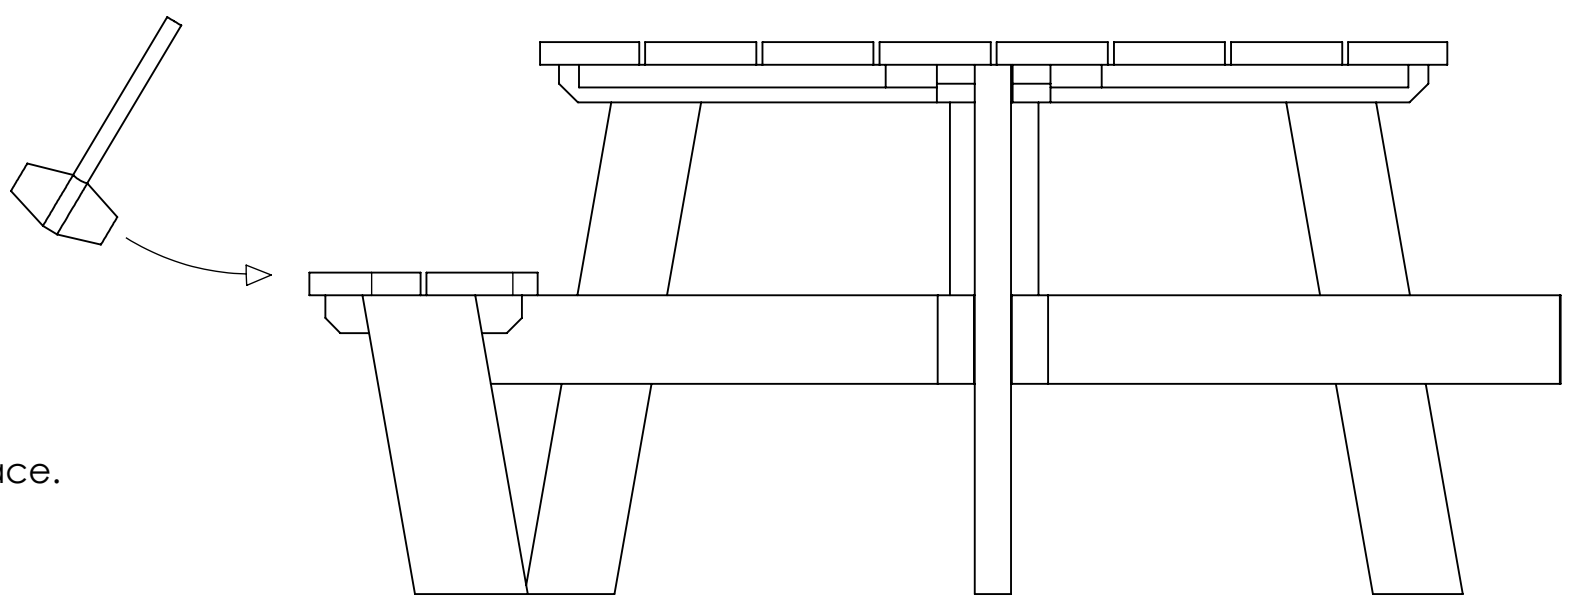

3


Once the bench is all the way down, knock it forwards until the bottom cross bar touches the leg. Minor adjustments may be required to send the bench back down if it has lifted.

4

Ensure that all bench legs are touching the ground before final fixing. Use the 5 x 90mm stainless screws provided. 2no. 70mm screws through the top of the seat in to the horizontal brace. 1no. 90mm screw at the bottom in to the base of the leg.

Fix Down
2 no. 70mm screws

1no. 90mm Screw

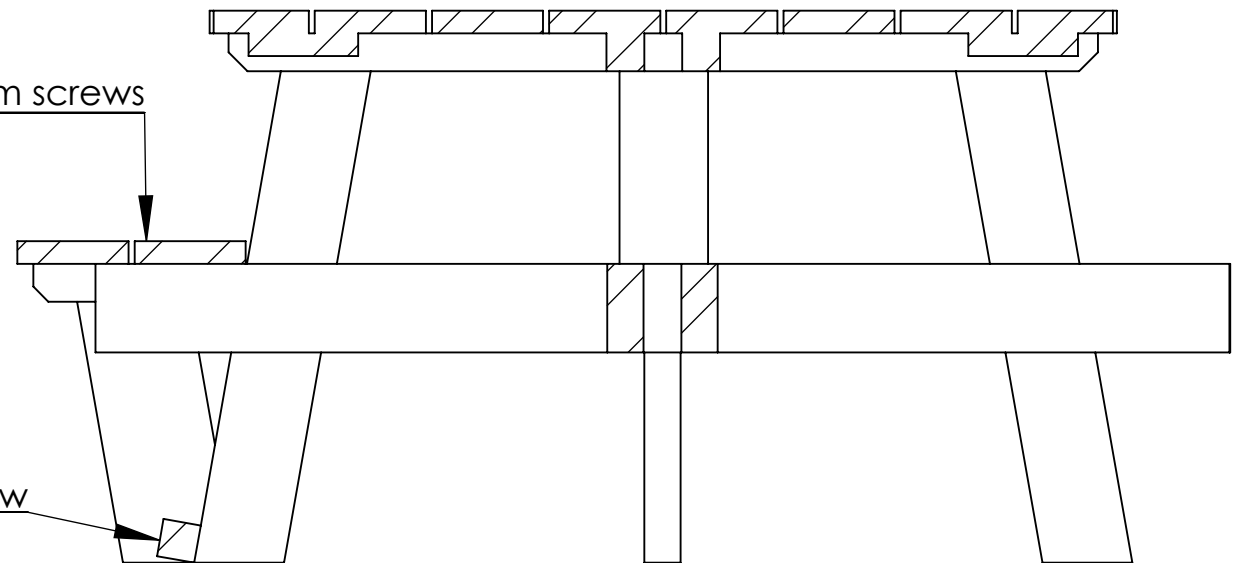

Tools required:
Mallet
Drill/Driver with PZ2 driver bit.
5mm Drill bit & Countersink

For any technical questions, please call us on:
020 8684 9601

DO NOT SCALE DRAWING		A3
Earth Anchors Ltd		
TITLE: Rounds Forest Saver Table Assembly Instructions		
DWG NO. EA2000375		REVISION 3
SCALE:	SHEET 1 OF 2	