



INSTALLATION INSTRUCTIONS WHEELISTAT (WITH POST FOR CONCRETE)

DOC REF: 503 ISSUE 01

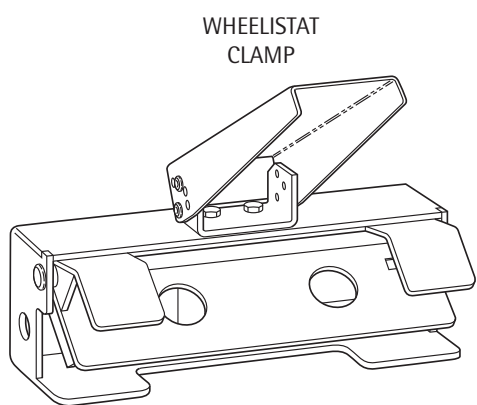

WHEELISTAT CLAMP

FASTLOCK KEY

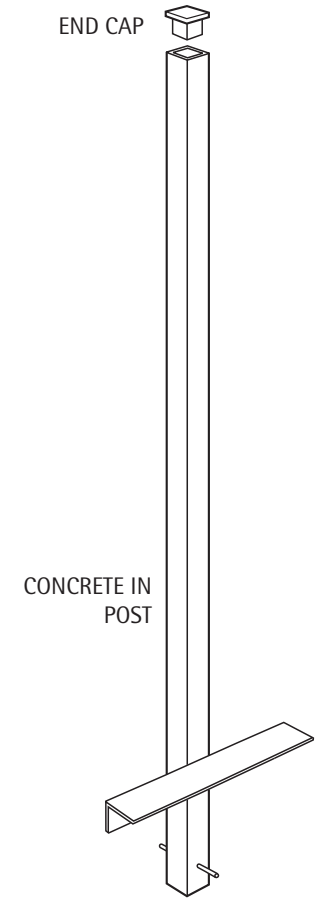


END CAP

CONCRETE IN POST

You will also require
2No, 19mm spanners.


1

INSTALLING THE POST

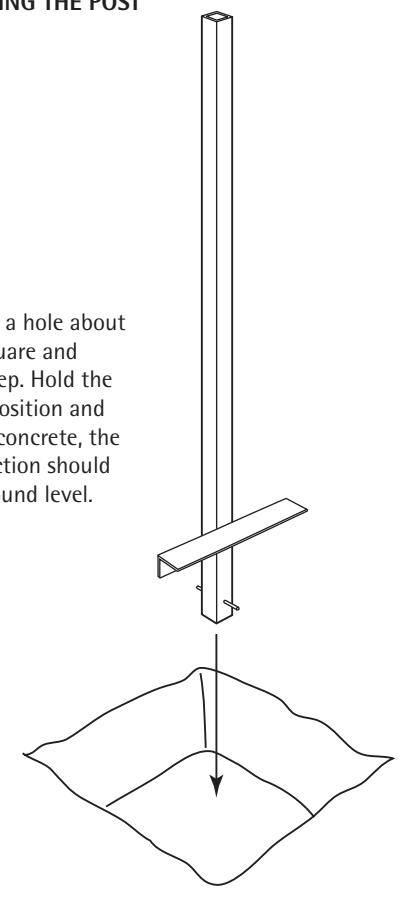

Excavate a hole about 40cm square and 50cm deep. Hold the post in position and fill with concrete, the angle section should be at ground level.


2

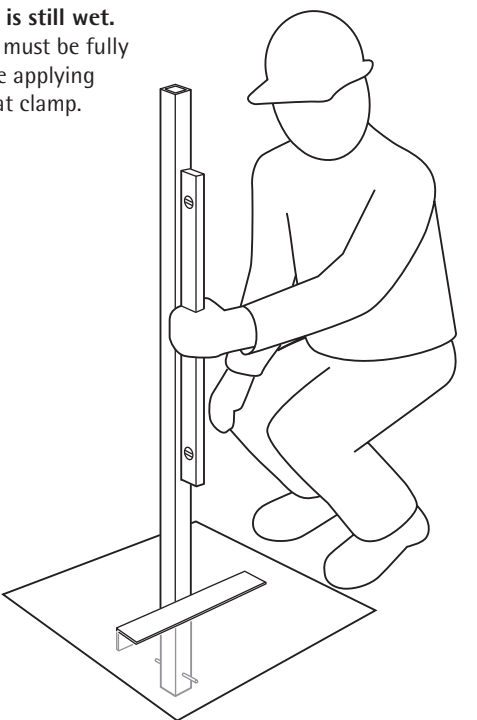

Make sure post is vertical while concrete is still wet. Concrete must be fully set before applying Wheelistat clamp.

3

FITTING THE CLAMP

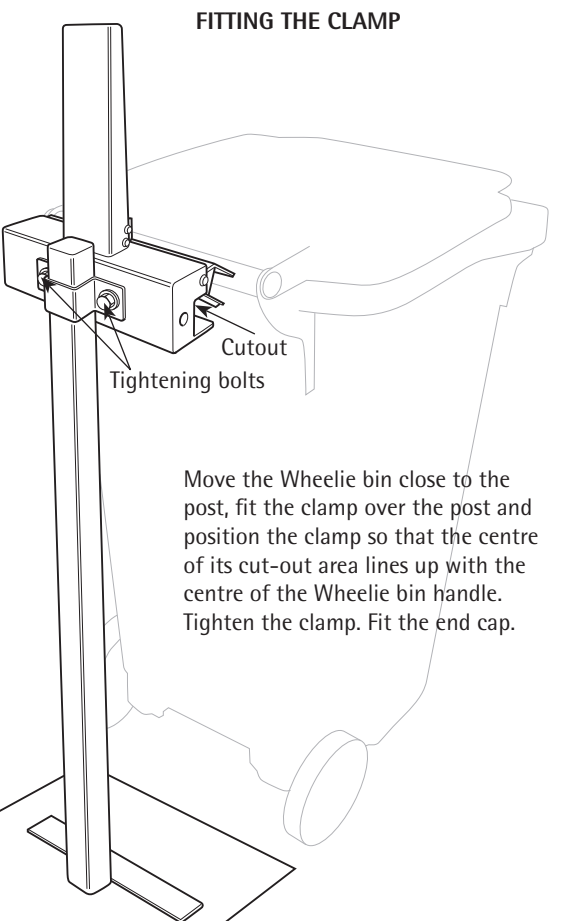


Move the Wheelie bin close to the post, fit the clamp over the post and position the clamp so that the centre of its cut-out area lines up with the centre of the Wheelie bin handle. Tighten the clamp. Fit the end cap.

Labels: Tightening bolts, Cutout

4


OPTIONAL LID RESTRICTOR

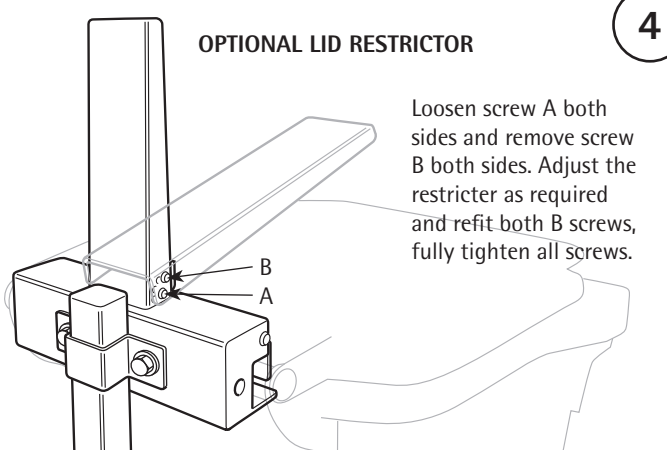

Loosen screw A both sides and remove screw B both sides. Adjust the restricter as required and refit both B screws, fully tighten all screws.

Labels: A, B

5

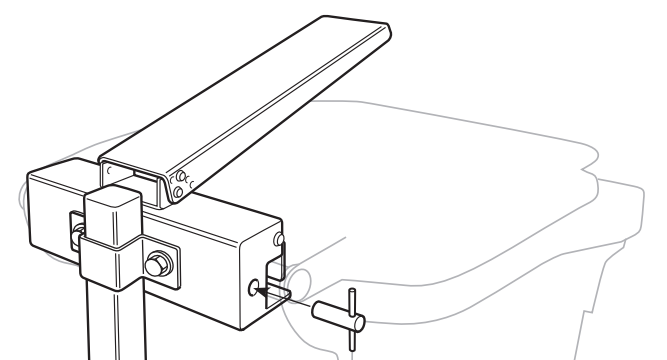

Once the Wheelistat is closed use the Fastlock key to unlock the mechanism and release the bin.