
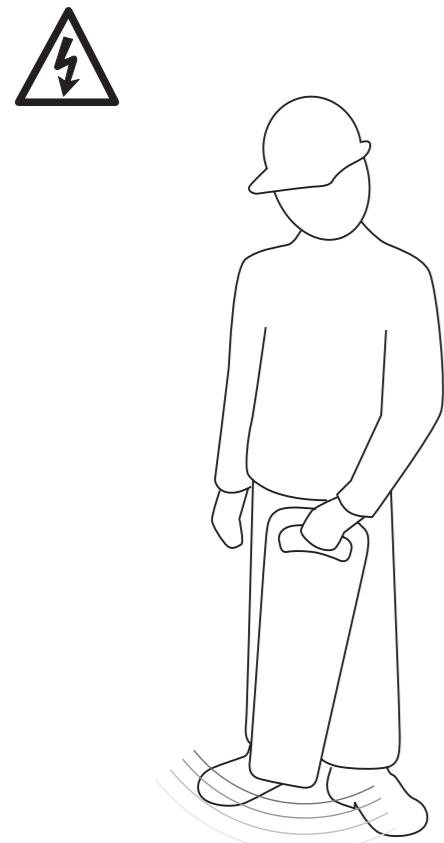


# INSTALLATION INSTRUCTIONS


## HEALTHGUARD® HGN35A DOG WASTE & CIVIC LITTER BINS

DOC REF: 424 ISSUE 01

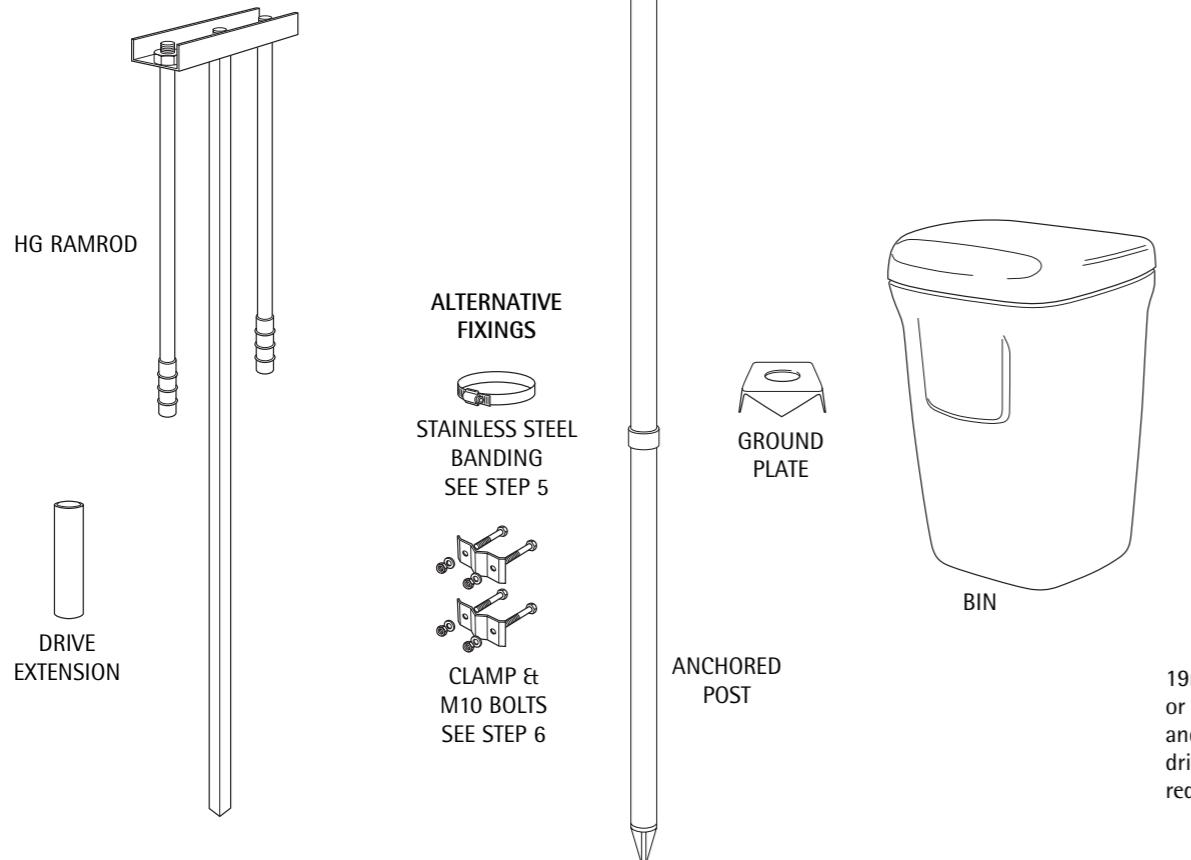


1

Slide the drive extension and anchored post onto the ramrod.

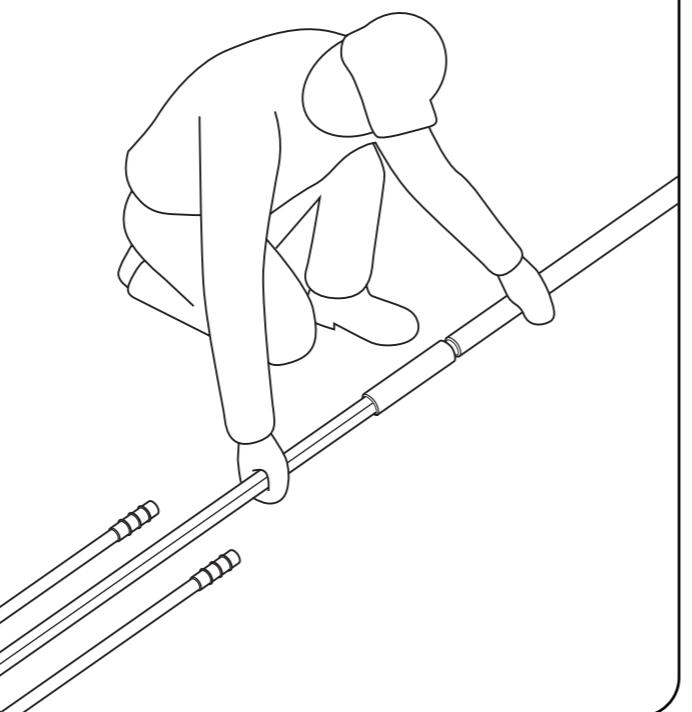


2

**ANCHORING**  
Position the ground plate, and tread down until flush with the ground. Position the anchored post. Lift and ram down the ramrod until the collar on the post meets the ground plate.

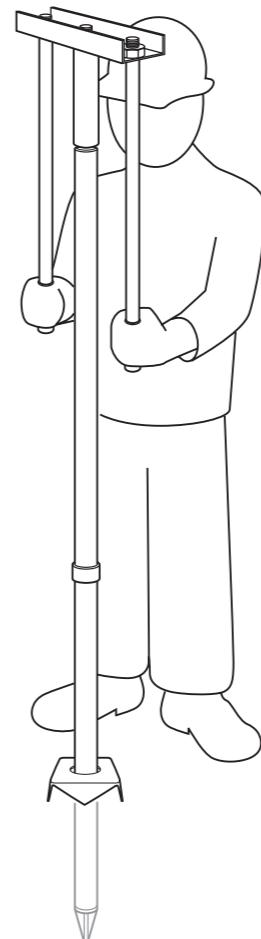


3


**DRIVING OUT THE FLUKE**  
Remove drive extension and replace ramrod into anchored post. Lift and ram down the ramrod to push out the fluke at the base of the anchor.

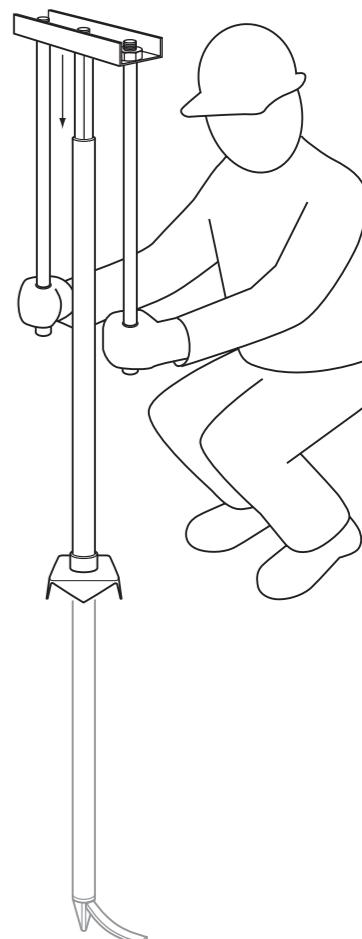

4

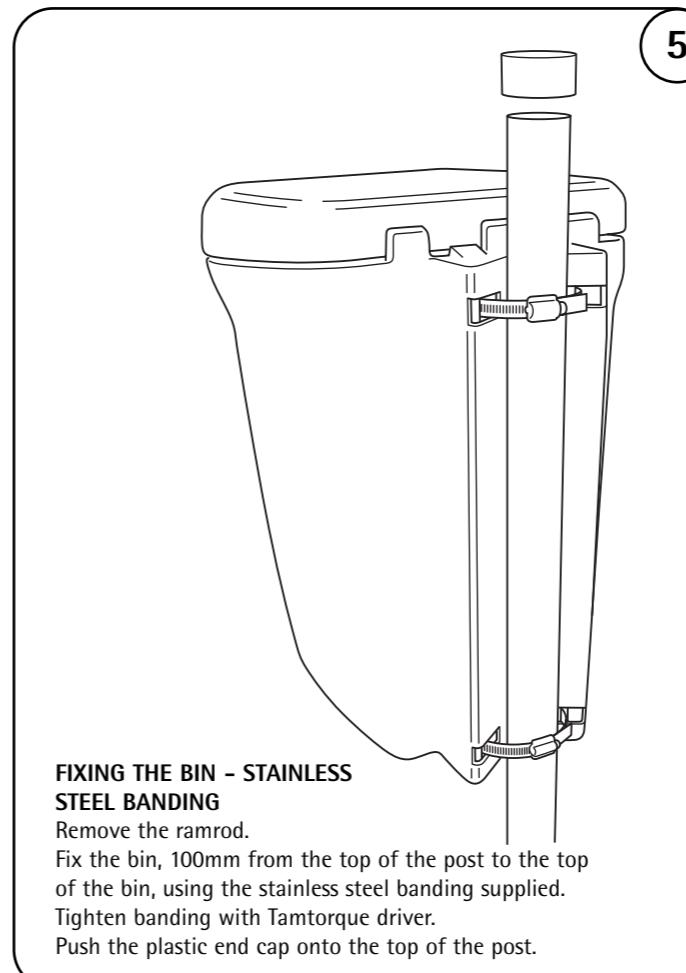

5

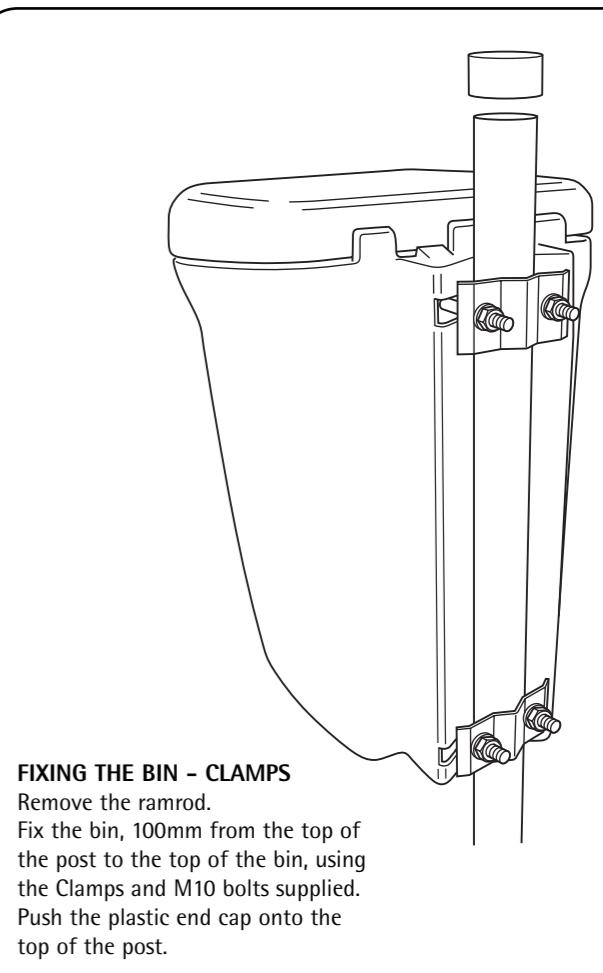

6



Earth Anchors Ltd  
15 Campbell Road, Croydon, Surrey CR0 2SQ, United Kingdom.  
Tel: 020 8684 9601 Fax: 020 8684 2230  
[www.earth-anchors.com](http://www.earth-anchors.com)

DOC REF: 424 ISSUE 01